


# New Features for Olhausen Billiards Shuffleboard Scoreboards

Hold both yellow buttons down for approximately 3 seconds to toggle scoreboard between demo mode to normal mode.

Scoreboard display will flash twice when changed to demo mode. It will flash display once when switched back to normal mode.

Demo mode will keep scoreboard always on, unless user presses the wake button to turn it off.

Scoreboard will default back to normal mode if wake button is held down for more than 15 seconds (forcing it back to keypad connection mode).

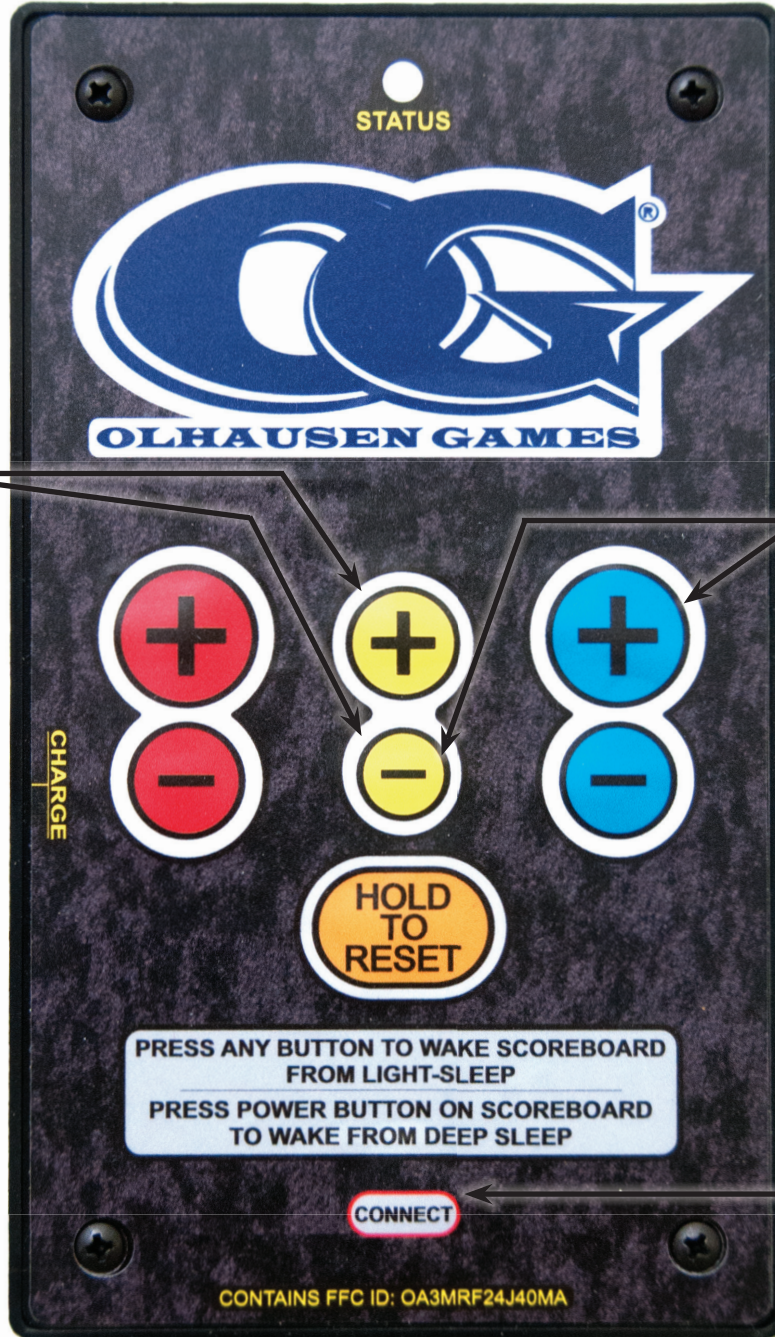

Press and hold blue "+" and yellow "-" buttons until status LED blinks 5 times to tell keypad to drop its connection to the scoreboard.

To reset board connect to charger; Hold wake up button at least 30 seconds or until reset

Hold connect button down to initiate a connection to the scoreboard. This button is disabled once the keypad establishes a connection.