



## **OLHAUSEN GAMES SHUFFLEBOARD CARE AND MAINTENANCE INSTRUCTIONS**

*Before waxing your playfield for the first time, your playfield should be cleaned with Olhausen Games Cleaner Polish. For best results follow all instructions.*

1. Apply Olhausen Games Cleaner Polish with a towel to remove foreign matter from your playing surface. This is the first step in the polishing process. Before the surface dries, buff lightly using a dry towel. OG Cleaner Polish should be used 2 to 3 times a month depending on usage.
2. Olhausen Games Liquid Wax should also be applied with a towel. Repeat the instructions above, buffing lightly with a dry towel until the surface is as smooth as ice. Once again, depending on usage, 2 to 3 times per month is recommended.

DO NOT attempt to improve on these instructions by allowing wax to dry or by using buffer.

DO NOT use furniture polish or silicone spray that is not specifically made for shuffleboards.

3. For ULTIMATE SPEED apply a light coat of Olhausen Games Silicone Spray to keep powder on the playfield and reduce tracing. After applying Silicone Spray, wait a few minutes before applying Olhausen Games Speed Powder. You are now ready to play shuffleboard.

*Accu-Lock*®

Olhausen Billiards · 1124 Vaughn Parkway · Portland · TN · 37148 (615)916-5497 (615)323-7585 Fax

## PICTURE ONE ►

Acculock adjuster with bolts and washers used to fasten the adjuster through the cradle bottom into the playfield




## PICTURE TWO ▼

AccuLock adjuster bolted in place. Make sure the playfield is centered in the cradle and then finger tighten all three bolts to hold the adjuster to the cradle and playfield. Notice, there is a gap in the center of the adjuster between the bottom of the cradle and the adjuster.



## PICTURE THREE ▼


AccuLock adjuster installed. Tighten the two outside bolts until they are snug and then tighten the center bolt until the gap disappears. DO NOT OVER TIGHTEN BOLTS.

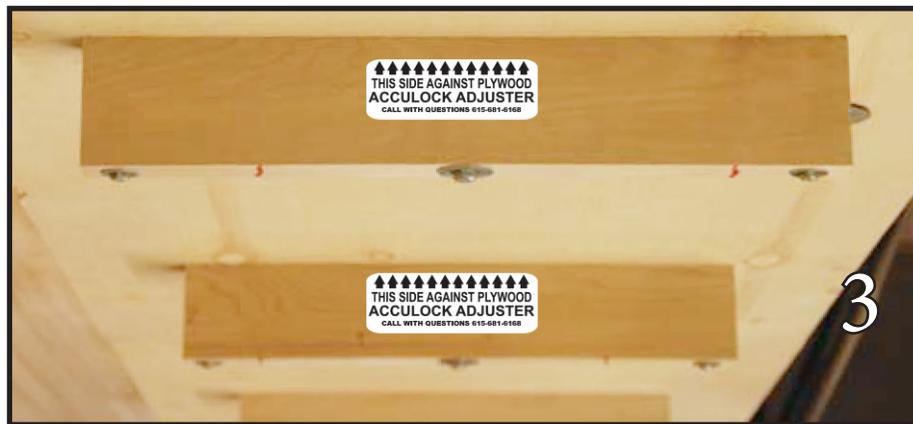

# Accu-Lock®

## Playfield Leveling/Adjustment Instructions Wood Adjuster

- Tools needed: 9/16 open end wrench and a 9/16 socket wrench.
- Place one ea. 3/8" x 1 1/2" washer (part #1) on each 3/8" x 5 1/2" bolt (part #2) and insert through the bottom of the wood climatic adjusters center hole.
- Now place a 3/8" x 1 1/2" washer (part #1) followed by one ea. 3/8" hex nut (part #3) on the top of the same bolt (part #2).
- Attach the center bolt loosely into the center insert on the underside of the playfield to allow alignment of the climatic adjuster with the two outer playfield inserts.
- Insert a 3/8" x 1 1/2" washer (part #1) and a 1/4" x 5 1/2" bolt (part #4) through the two outer climatic adjuster holes and attach to the playfield inserts finger tight.
- If the metal straight edge rocks side to side, the playfield is high in the center and the center bolt needs to be adjusted to pull the playfield downwards.
- If there is a gap or noticeable light seen between the straight edge and the center of the playfield, the playfield is low in the center and the center bolt needs to be adjusted to raise the center of the playfield upwards.
- Please refer to the "How to/Rules" section on [www.olhausenbilliards.com](http://www.olhausenbilliards.com) to view an instructional video on the leveling/adjustment procedures.
- Periodic adjustments may be needed based on the climatic conditions of the room where the table is located.

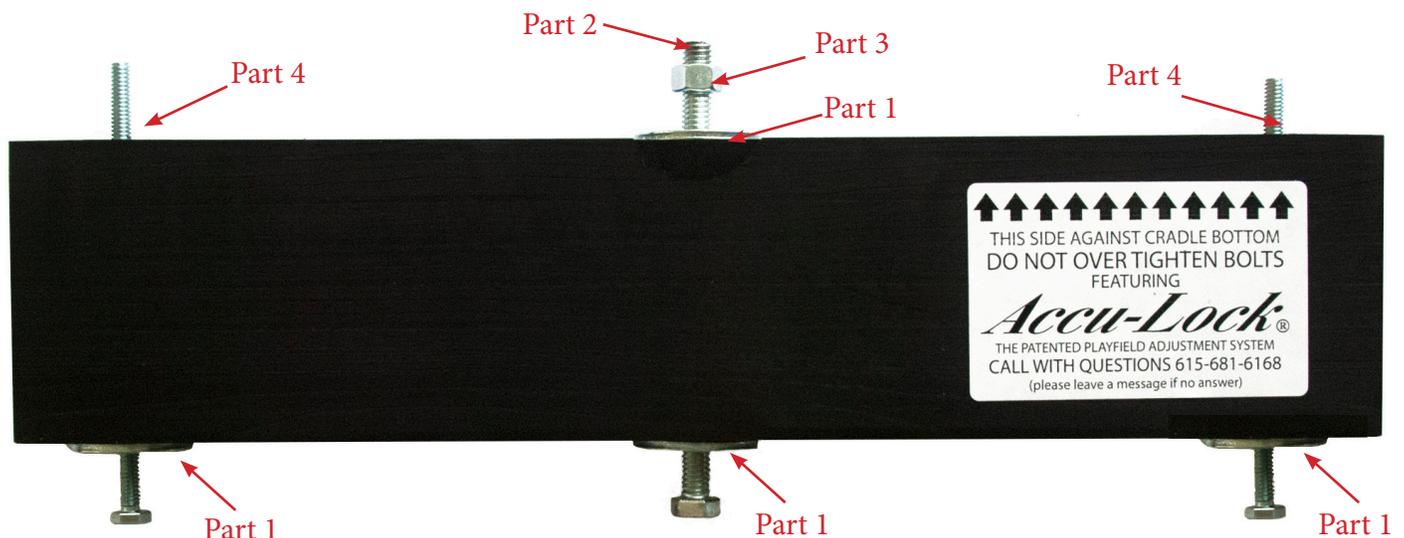




## Playfield Leveling/Adjustment Instructions

### *Metal Adjuster*

- Tools needed: 9/16 open end wrench and a 9/16 socket wrench.
- Place one ea. 3/8" hex nut (part #1) followed by a 3/8" x 1 1/2" washer (part #2) on each 3/8" x 5.5" bolt (part #3) and insert through the bottom of the metal climatic adjusters center hole.
- Now place a 3/8" x 1 1/2" washer (part #2) followed by two ea. 3/8" hex nuts (part #1) on the top of the same bolt (part #3).
- Attach the center bolt loosely into the center insert on the underside of the playfield to allow alignment of the climatic adjuster with the two outer playfield inserts.
- Insert a 3/8" x 1 1/2" washer (part #2) and a 1/4" x 4 1/2" bolt (part #4) through the two outer climatic adjuster holes and attach to the playfield inserts finger tight.
- Utilizing the provided metal straight edge, determine if the playfield needs to be adjusted upwards or adjusted downwards.
- If there is a gap or noticeable light seen between the straight edge and the center of the playfield, the playfield is low in the center and the center bolt needs to be adjusted to raise the center of the playfield upwards.
- Please refer to the "How to/Rules" section on [www.olhausenbilliards.com](http://www.olhausenbilliards.com) to view an instructional video on the leveling/adjustment procedures.
- Periodic adjustments may be needed based on the climatic conditions of the room where the table is located.

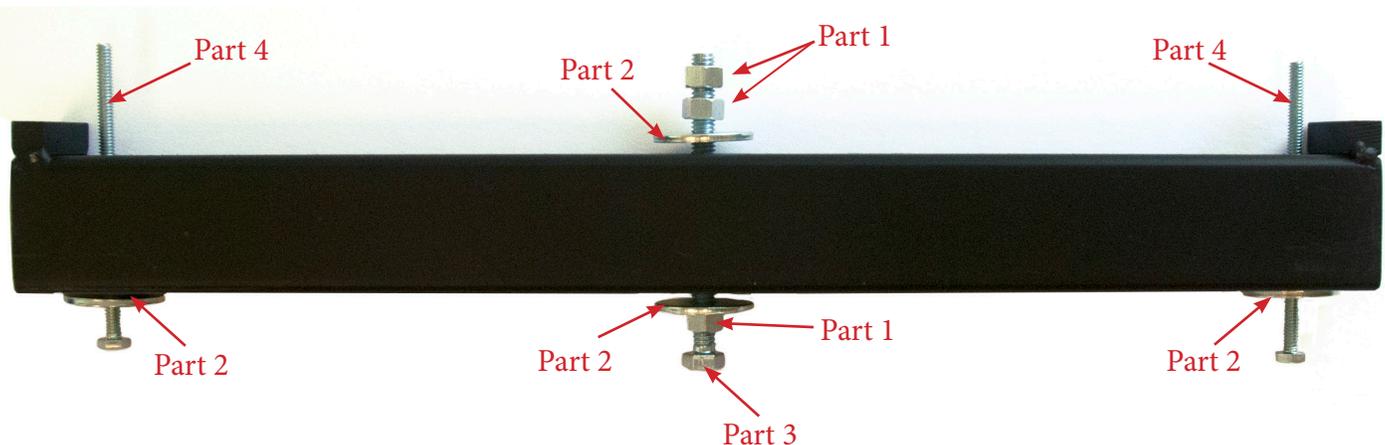

***Please contact Donny Olhausen at (615) 681-6168 with any additional questions.***

Olhausen Billiards · 1124 Vaughn Parkway · Portland · TN · 37148 (615)916-5497 (615)323-7585 Fax